

# How to add extra stage for 4 Stage Countertop Reverse Osmosis System

Place RO system on working surface




Remove blue c-rings from elbow on stage



Use fingers or collet tool to disconnect tubing (fourth stage). Push on the top of fitting, pull tubing out at the same time




Use fingers or collet tool to disconnect tubing (fourth stage). Push on top of fitting, pull tubing out at the same time

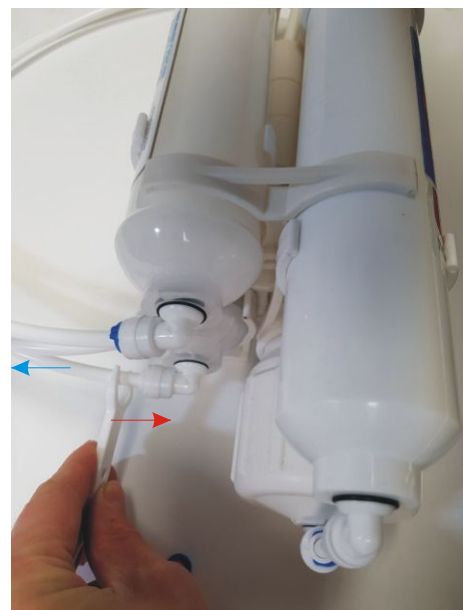

Result




Use fingers or pliers to turn elbow 90 degrees (face up).

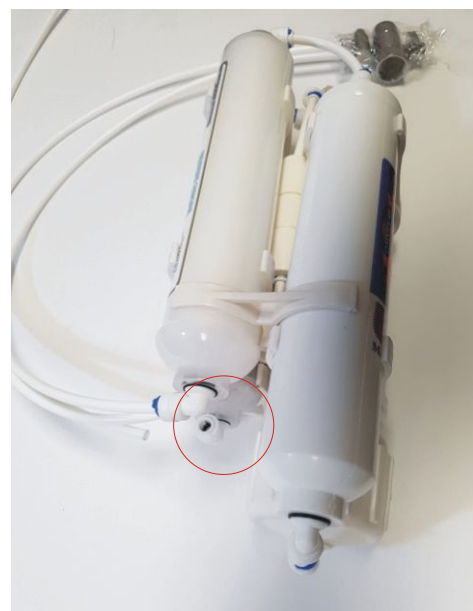

Disconnect first and second stages



Insert clip and place both clips face up

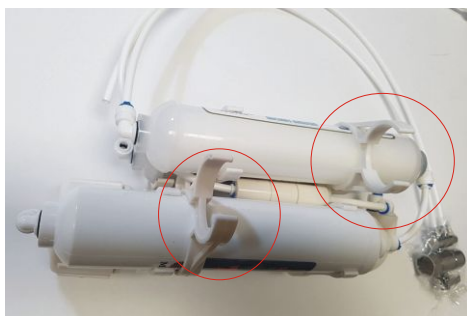


Cut tubing piece 13 1/2". Make sure to cut under 90 degrees.



Screw elbows onto extra stage (fifth stage) as shown on a picture




Insert 13 1/2" piece of tubing onto elbow (fourth stage), and push tubing inside for 1/4"

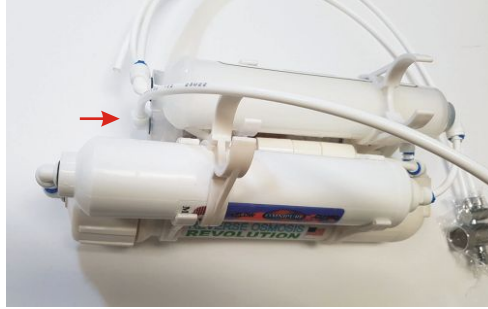

Reconnect other side of tubing to extra stage, and push tubing inside for 1/4". Check flow direction (arrow)




Result

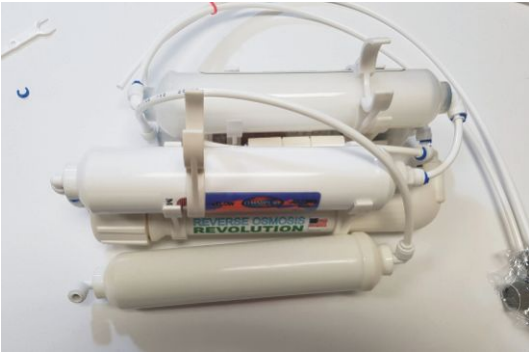

Insert extra stage onto clips



Reconnect tubing to extra stage, and push tubing inside for 1/4".

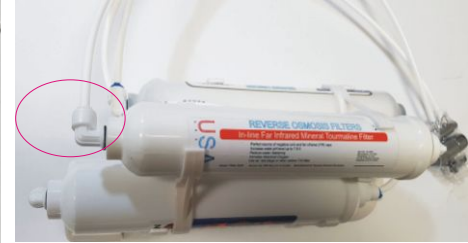

Insert blue c-rings onto elbows



# How to add extra stage for 5 Stage Countertop Reverse Osmosis System

Place RO system on working surface



Remove 2 blue c-rings




Remove fifth stage from clips. Disconnect tubing (push on top of fitting the the time pull tubing out)




Use fingers or collet tool to disconnect tubing (fifth stage). Push on top of fitting, pull tubing out at the same time



Result after disconnecting tubing

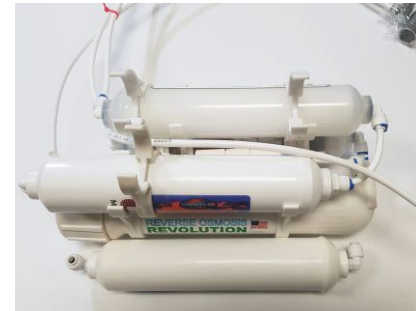

Insert extra clip

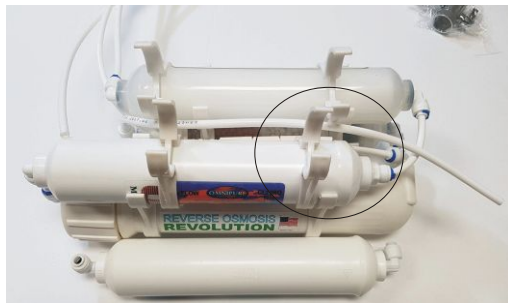

Flip over fifth stage cartridge, check flow direction (arrow)



Insert cartridge onto clips



Cut tubing between fourth & fifth stages, make sure to cut under 90 degree angle (!)




Use pliers or fingers to turn elbow as shown on picture



Screw elbows onto new 6st stage.  
Make sure elbows positioned as  
shown on a picture. Six stage cartridge  
may vary



Insert extra stage onto clips.  
Check flow direction (arrow)

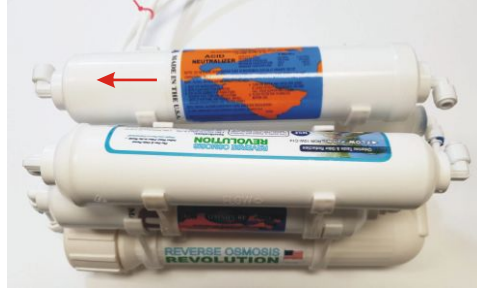

Cut 2" piece of tubing. Make sure  
to cut under 90 degree.  
Insert tubing



Connect fifth & sixth stages.  
Insert tubing and push tubing  
inside for 1/4"



Connect tubing (Pure Water out).  
Insert tubing and push tubing  
inside for 1/4"



Insert 3 blue c-rings



Optional: connect fifth and sixth stages with extra clip

